


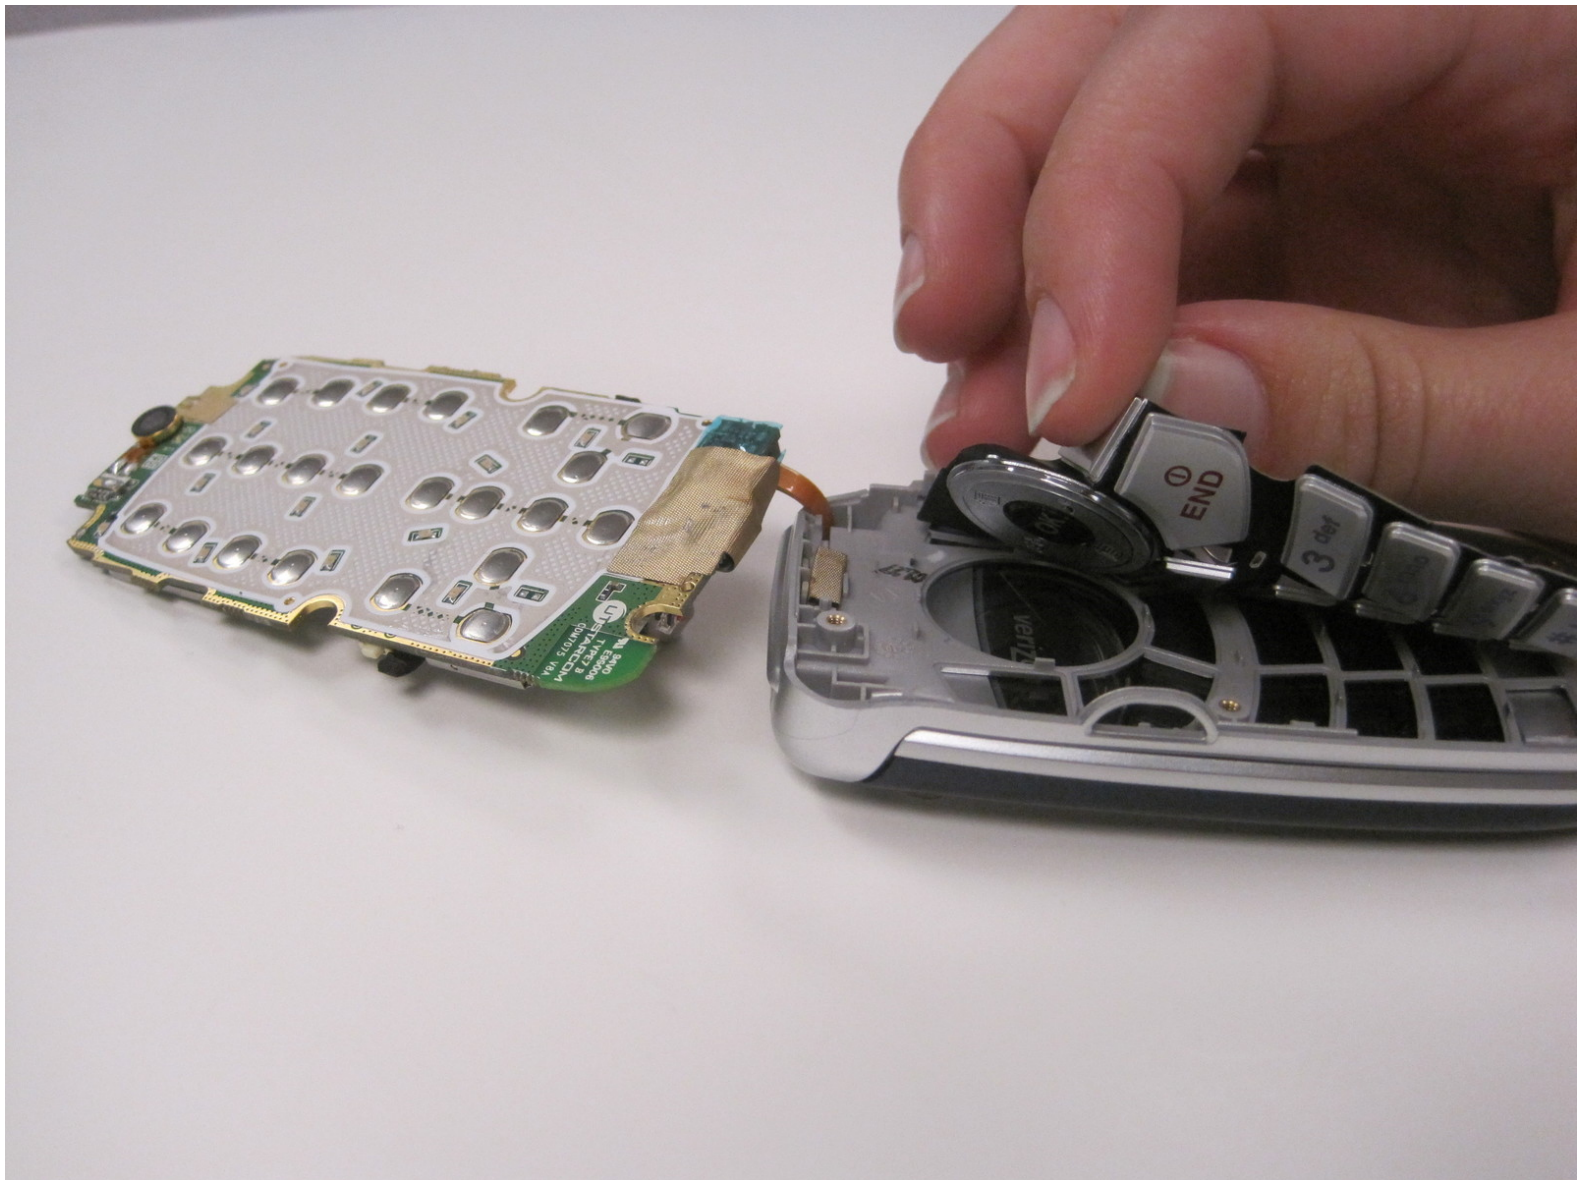

Verizon Wireless CDM 7075 Keypad Replacement

This guide will show you how to replace the keypad on a Verizon Wireless CDM 7075 cellular phone.

Written By: Corey Ryman



INTRODUCTION

Make sure you have followed the prerequisite guide of removing the battery before proceeding with this guide.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Depress the gray button on the back panel of the cell phone.

Step 2



- Press down and slide the back panel to remove it from the phone, while continuing to hold the gray button.

Step 3




- Carefully remove the battery from the phone, prying from the top.

Step 4 — Keypad



- Pry off the top cover on the back of the phone.

Step 5

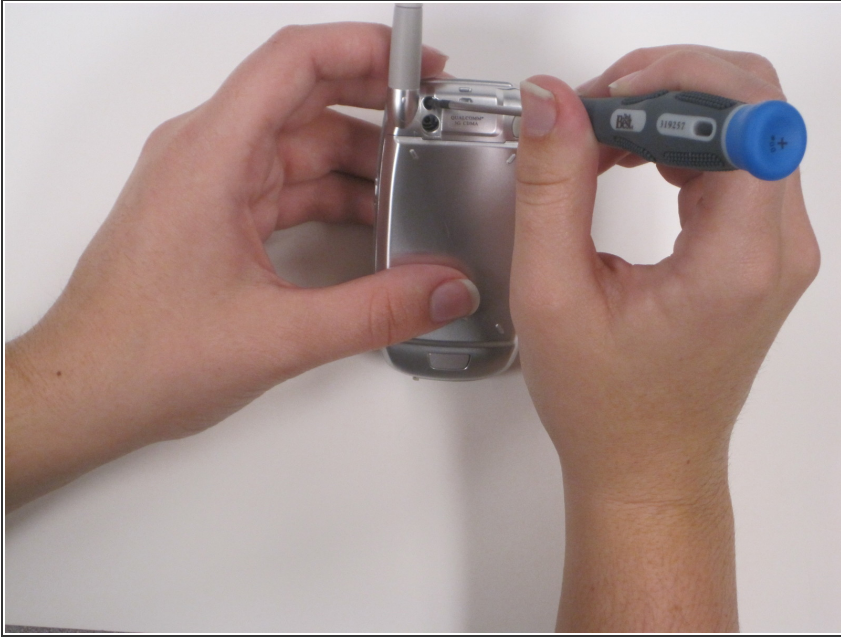


- You will then remove the screws from the back of the phone.


Step 6



- Next you will pry apart the two halves of the phone.


 Make sure you do not damage the ribbon cable connecting both halves

Step 7

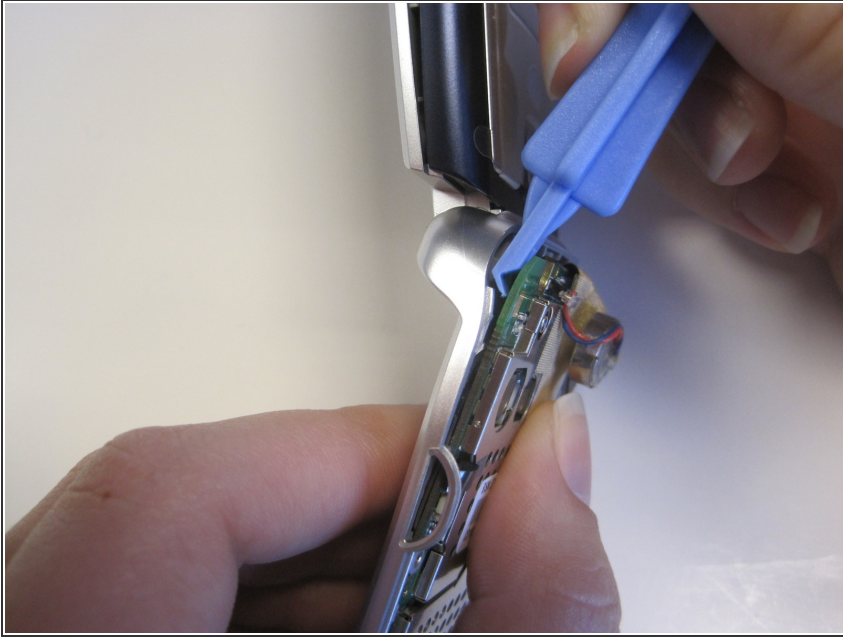

- Then use the plastic opening tool to remove the motherboard from the front half of the phone.

Step 8

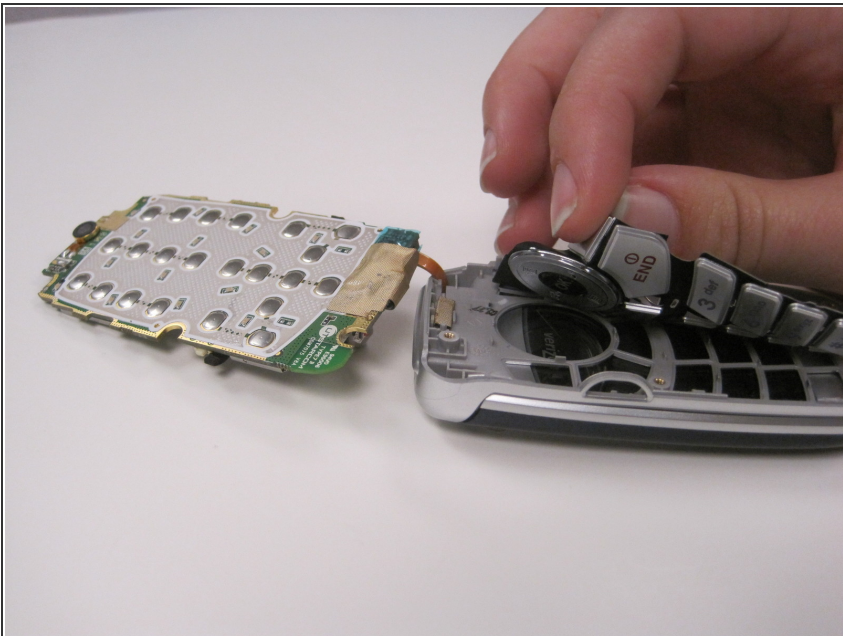

- Next you will peel off the keypad after the motherboard is removed.
- ⚠ Be sure you do not to tear the brown connector tape.
- Lastly insert the new keypad.

To reassemble your device follow these instructions in reverse order.

This document was last generated on 2017-07-13 07:59:42 PM.